



Count on it.

# TMC-424E

Toro Modular Controller - 4 to 24 Stations

English

Español

Français



## User's Guide

- Installation
- Programming
- Operation







 

## Introduction

The TMC-424E Series takes modularity to a whole new level. Toro's advanced modular technology combines sophisticated features with simple operation to provide a customizable controller. Station count can be 4 – 24 stations, using four- or eight-station modules. Real-time flow sensing monitors up to three independent sensors and is compatible with the Toro TFS Series flow sensors. Versatile run times allows for additional watering flexibility. Add this together with features like two levels of surge protection, compatibility with the TMR-1 Maintenance Remote, the rugged dual-use cabinet, and convenient program review feature, and you really do have the ultimate in controller Flexibility.

TMC-424E controller features:

- Advanced hybrid control module featuring easy-to-use dial interface
- Non-volatile memory—retains program data without battery backup
- Four fully-independent watering programs
- Concurrent operation of up to three automatic programs
- 16 unique start times allotted to programs in any combination of 0–16
- Program cycle and soak option provides 1–30 repeat cycles and soak time delay from 1 second to 60 minutes
- Day scheduling by Calendar days, 1–31-day Interval or Odd/Even days with selective day exclusion
- Station run time adjustable from 1 second to 8 hours
- Season Adjust by program and by month from 0–200% (automatic split-cycle watering for adjustment over 100%)
- Rain delay to postpone automatic watering operation from 1–14 days
- Master valve/pump start operation assignable by program or station
- Programmable well recovery/station delay from 1–60 seconds or 1–60 minutes
- Flow monitoring and alert parameters for 1– 3 flow sensors.
- Output current watchdog feature detects overload/short-circuit condition and automatically bypasses suspect station(s).
- Optional Normally Open master valve control on flow sensing modules
- Manual operations by station and program
- Review feature quickly recaps all program information
- 12-or 24-hour time designation
- Programming display prompts selectable in English, Spanish, French, German, Italian or Portuguese
- Valve test feature for quick station and system check
- Equipped for optional Toro rain sensor models TRS, TWRS and TWRFS, Toro TMR-1 handheld maintenance remote and Toro TFS Series flow sensors.

The unique TMC-424E Expansion Modules are color-coded for easy identification. The modules can be mixed and matched in any combination and are available in six models as indicated in the table below.

Model Number	Color Code	Station Count	Surge Level	Surge Icon	Flow Monitor	Flow Monitor Icon	Master Valve Control
TSM-4	Gray	4	Standard		No	—	No
TSM-8	Gray	4	Standard		No	—	No
TSM-4H	Beige	4	High		No	—	No
TSM-8H	Beige	4	High		No	—	No
TSM-4F	Blue	4	High		Yes		Yes
TSM-8F	Blue	4	High		Yes		Yes

The Expansion Modules can be installed and removed at any time without powering down the controller. The TMC-424E will gain instant access to the module and will logically number the stations based on module position.

For example, if three 4-station modules are installed, the stations will be numbered 1–12: module I (stations 1–4) module II (stations 5–8) and module III (stations 9–12). If module II is removed, stations 5–8 will be automatically assigned to module III. All stations will remain in sequence without gaps.

## Getting Started

As an initial step, we recommend that you take a few moments to browse through various sections of this User's Guide. Also, take the time jot down some basic watering program and station information on the Watering Schedule form provided. Having this information readily at hand will be very helpful during the initial controller setup and programming procedures.

Note that the Watering Schedule form provides a convenient pocket for the User's Guide and Quick Reference Guide when folded and attached to the inside of the cabinet door.

## Table of Contents

<b>Introduction</b>	ii
<b>Control Module Overview</b>	2
<b>Internal Component Overview</b>	4
<b>Programming Overview</b>	5
What is a Watering Program?	5
What is a Program Watering Cycle?	5
What is Armchair Programming™?	5
<b>Controller Programming</b>	6
Set Current Time and Date	6
Select the Program	6
Set Station Run Time	6
Set Program Start Times	7
Set Watering Day Schedule	7
To Set Calendar Days	8
To Set Odd or Even Days	8
To Set Interval Days	8
<b>Season Adjust Feature</b>	9
<b>Special Functions</b>	10
Setting Station Delay Time Option	10
Setting Master Valve/Pump Start Options	10
To Select MV/PS Operation by Program and Station	11
To Set MV/PS Start Delay	11
To Set MV/PS Operation During Station Delay	11
Setting Watering Cycle Repeat Option	12
Setting Program Stack/Overlap Option	12
Erase Program Memory	13
Selecting Handheld Remote Operation	13
Selecting Display Language Option	13
12/24-hour Time Display Option	13
Selecting Run Time Format	13



<b>Manual Operations</b>	14
Manual Station Operations	14
True Manual Operation	14
Timed Manual Operation	14
Manual Program Operations	15
Single Program Operation	15
Multiple Program Operation	15
<b>Flow Sensor Operations</b>	16
Select Fill Delay Option	16
Select Flow Sensor Module Master Valve Type	17
Select Flow Rate Alert Thresholds	17
<b>Rain Sensor Control Features</b>	18
Rain Sensor Timed Bypass	18
Rain Sensor Control by Program	19
<b>Valve Test Feature</b>	19
<b>Rain Delay Feature</b>	20
<b>Program Review Function</b>	20
<b>Installation Instructions</b>	21
Cabinet Installation	21
Field Wire Connections	22
Flow Sensor Connection	23
Power Connection – Indoor Models	24
Power Connection – Outdoor Models	25
Rain Sensor Installation (Optional)	26
Toro TMR-1 Handheld Remote Installation (Optional)	27
<b>Appendix A – TFS Flow Sensor Performance Data</b>	28
<b>Appendix B – TMC-424E Current Load Data</b>	29
<b>Appendix C – Display Alerts</b>	30
<b>Appendix D – Default Settings - Abbreviations</b>	31
<b>Specifications</b>	32
<b>The Toro Promise - Limited Warranty Information</b>	33
<b>FCC Compliance Information</b>	36
<b>Customer Care You Can Count On</b>	36

## Control Module Overview

The following brief descriptions of the controller components and display elements are provided for general overview. Each of these items are explained in detail within the appropriate section of this guide.

### 1 - Program Switch





Four-position slide switch used to select program **A**, **B**, **C** and **D** for set up, review and manual control.

### 2 - Digital Display

- a** - Station run time icon.
- b** - Start time icon.
- c** - Program identifiers.
- d** - Prompt displayed with Interval schedule length
- e** - Flow sensor icon displayed with flow sensor expansion module
- f** - % symbol displayed when the Season Adjust function is active.
- g** - Water drop icon indicates current watering activity. Icon with slash indicates automatic operation is disabled (Off, station disabled or Rain Delay function.
- h** - Prompt displayed to indicate current day within an Interval watering day schedule.
- i** - Expansion module dock identifier (I, II and III, left to right).
- j** - Hollow circles represent the station terminals of an installed 4-or 8-station expansion module. Station positions of the current operating station or stations assigned to a program are indicated by a solid circle.
- k** - Indicates the station number or start time number is currently shown in the 2-digit numeric display (directly above).


**l** - 2-digit display identifies the station number or start time number currently selected.


### 3 - Navigation Buttons


The  and  buttons are used to select function menu items. All numeric, On/Off, and Yes/No values are selected with the  and  buttons.


### 4 - Function Dial


Turns in either direction to select the following operating, control, and programming functions:


**RUN**  - The normal position for automatic controller operations.


**CURRENT TIME/DAY**  - To set clock time, day and date.


**STATION TIMES**  - To set station run time.


**START TIMES**  - To set program start times.

**CALENDAR DAYS**  - To set program watering day schedule by days of the week.

**ODD/EVEN**  - To set program watering day schedule by Odd or Even numbered days.

**SEASON ADJUST**  - To adjust run time of all stations within a program and/or program within a month from 0 to 200% in 10% increments.

**SPECIAL FUNCTIONS**  - To select specialized setup and programming options (see page 10 for details).

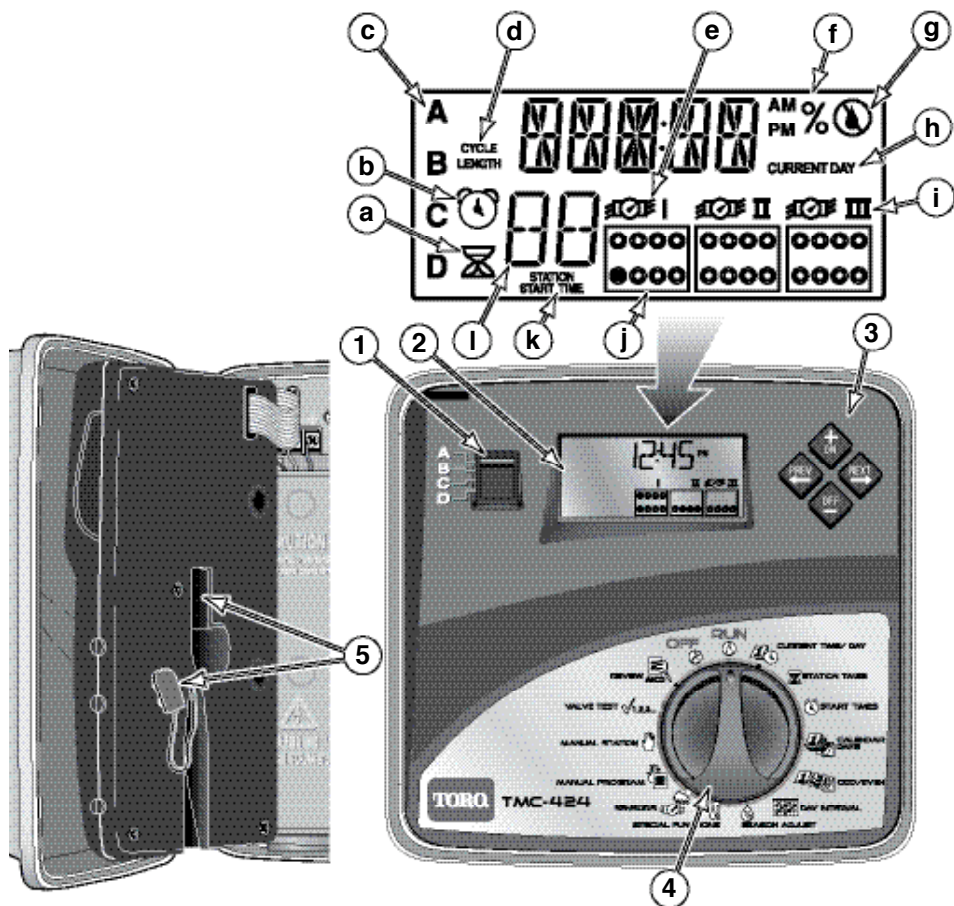

**SENSORS** – To select flow sensor operation setup parameters.

**MANUAL PROGRAM** – To operate watering programs manually.

**MANUAL STATION** – To operate individual stations manually.

**VALVE TEST** – To manually test valve operating sequence using a temporary run time.


**REVIEW** – To recap all program information including: start times, run times, and season adjust %.


**OFF** – Shuts off and prevents all automatic and manual watering operations.

### 5 - 9V Battery Compartment & Clip

A standard 9V battery is required for Armchair Programming™ and to maintain clock time during an extended power loss.

## Internal Component Overview

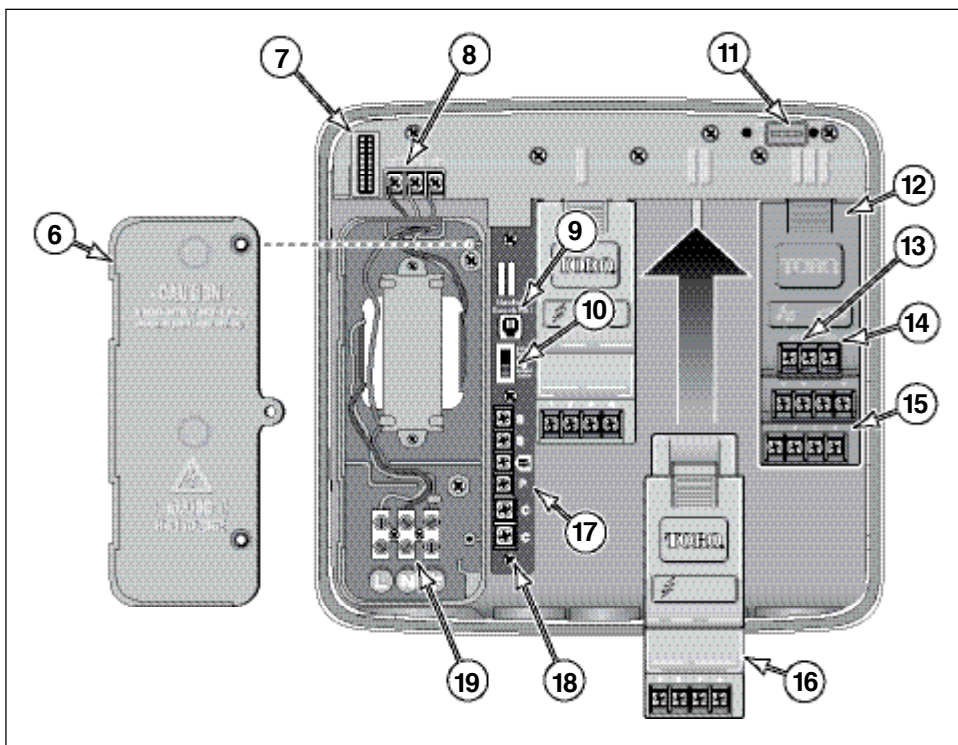

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>6 - Power supply compartment cover.</b></p> <p><b>7 - Control module ribbon cable receptacle.</b></p> <p><b>8 - Transformer 24 VAC output connection terminals</b></p> <p><b>9 - MR-1 remote connection port.</b></p> <p><b>10 - Rain sensor bypass switch.</b></p> <p><b>11 - Auxiliary port (not enabled).</b></p> <p><b>12 - Flow sensor expansion module (model TSM-8F indicated).</b></p> <p><b>13 - Flow sensor wiring terminals</b></p> <p><b>14 - Flow module master valve wiring terminal.</b></p> | <p><b>15 - Expansion module valve wiring terminals.</b></p> <p><b>16 - Expansion module (model TSM-4 shown).</b></p> <p><b>17 - Wiring connection terminals:</b><br/> <b>S</b> - Rain Sensor (2).<br/> <b>Hot Post</b> (24 VAC source)<br/> <b>P</b> - Pump Start/Master Valve<br/> <b>C</b> - Valve (field) Common (2)</p> <p><b>18 - Optional Earth Ground Lug Attachment Screw.</b></p> <p><b>19 - Input power wire connection terminals:</b><br/> <b>L</b> - Line (mains 1)<br/> <b>N</b> - Neutral (mains 2)<br/>  - Ground</p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## Programming Overview

### What is a watering program?

In basic terms, a watering program is a small set of instructions that tells the controller which days will be active for watering, when to start a watering cycle, and how long each station will operate during the cycle. The TMC-424E series has four independent watering programs identified as **A**, **B**, **C**, and **D**.

Separate programs are usually used to group stations with similar landscape or watering attributes or to provide a way to segment specific site conditions, such as north-facing slopes or shaded turf areas. As you can see, the availability of four programs allows you to have unique watering programs for your varied landscape needs. Multiple programs can be designated to operate one at a time or can overlap operated in sequence or concurrently with up to three programs at the same time as you choose. This feature enables more watering to be completed within the prime watering time, which is generally between midnight and 6:00 a.m.

### What is a program watering cycle?



When a program start time is selected, that time becomes the beginning of an automatic watering cycle. A watering cycle operates each station with an assigned run time duration in the program, one by one, in numeric sequence from the lowest to the highest station number.

The TMC-424E provides up to 16 watering cycle start time slots that can be assigned to the four programs in any combination. For example, program **A** could have 10 start times, program **B** two start times, program **C** four start times and program **D** no start times. Any combination up to 16 start times is permitted.

**NOTE:** A Watering Schedule Form is provided for your convenience. Use this form to plan and record your automatic watering information. Keep the card handy for reference by attaching it inside the cabinet cover.

### What is Armchair Programming™?

A 9V battery can be installed, enabling the control module to be fully programmed prior to installation – in the comfort of your favorite easy chair.






1. Slide and lock the expansion module(s) into position.
2. Attach a 9V battery to the control module battery clip and stow the battery in the slot provided. (See item 5 on page 3.)
3. With the Function Dial in the **RUN**  position, press the  button to acquire the expansion module configuration (note the displayed module identifier).
4. To remove the control module from the cabinet, disconnect the ribbon cable at the cabinet, then press the top hinge in to release the module.
5. Program the controller starting at Setting Current Time and Date on page 6.

**NOTE:** The 9V battery powers the microprocessor during an extended AC interruption. Once programmed, the battery can be removed or remain installed as preferred. Controller output requires AC power input.

## Controller Programming

**NOTE:** English display prompts and 12-hour (a.m./p.m.) time format are factory-default settings. To select an optional display language, including Spanish, French, Italian, German and Portuguese, and/or a 24-hour time format, refer to the Special Function setup procedures on page 13.

### Set Current Time and Date

1. Turn the Function Dial clockwise to **Current Time/Day** . The hour digits will begin flashing.
2. Adjust the display by pressing the  or  buttons.  
**NOTE:** Hold either button down for rapid advance.
3. Press the  button to select the next field.
4. Repeat steps 2 and 3 to set the current minutes, year, month and day (current weekday will be set based on calendar setting).
5. Return the Function Dial to **RUN**  when finished.

### Select the Program






**NOTE:** If the controller has been previously programmed, the user-defined program settings can be quickly erased and reset to factory defaults. See “Using the Program Memory Erase Feature” on page 13.

To simplify the programming process, the following procedures are provided to define the operating parameters of one program at a time.

To begin, set the program switch to select program **A**, **B**, **C**, or **D**.







### Set Station Run Time

A station is assigned to the selected program when it is given a run time duration. The station can have only one run time assignment per program, but can have a separate run time assignment in each program. By default, station run time is defined in minutes and hours. To enable station run time to include seconds, see “Station Runtime Display Format” on page 13.

1. Turn the Function Dial to **Station Times** .
2. Press the  or  button to select the station number. The corresponding station output terminal will be shown on the display as a solid circle.
3. Press the  or  buttons to adjust the station run time from Off (-- -- --) to 1 minute – 8 hours (in 1-minute increments). If seconds format is enabled, station run time can be set from 01–60 seconds.  
**NOTE:** Hold either button down for rapid advance.
4. Repeat steps 2 and 3 for all stations to be assigned to the selected program.

## Set Program Start Times

**NOTE:** The TMC-424E enables a total of 16 unique start times to assigned to four programs in any combination totaling 16. For example, program **A** could have 12 start time assignments, which would leave four start time assignments available for programs **B**, **C** and **D**.

1. Turn the Function Dial to **Start Times** . The start time hour digit(s) will begin flashing.
2. Press the  or  button to select a start time number (01 to 16).  
**NOTE:** Any start time number currently assigned to another program can not be selected. If all 16 start time assignments are in use, **NONE** will be displayed.
3. Press the  or  button to select a start time hour (note the correct a.m./p.m. designation in the 12-hour clock mode).  
**NOTE:** To remove a start time, select --:-- (Off), located between the hours of 11:00 p.m. and 12:00 a.m. (00 minutes).
4. Press the  button to select minutes digits. Repeat step 3 to set start time minutes (00–59).
5. Repeat steps 2–4 to set additional start times for the selected program.

## Set Watering Day Schedule

The TMC-424E series offers three watering day schedule formats. Each program can have any one of the following schedule formats:

**Calendar Days** – Use this scheduling method to select specific days of the week.

**Odd/Even** – Schedules days by odd-or even-numbered calendar days.

**NOTE:** When an odd-numbered day schedule is used, watering will not occur on the 31st of any month and February 29th of a leap year.


 




**Day Interval** – Scheduling by Day Interval enables a specific number of days between watering to be selected. For example, selecting a 1-day Interval schedules watering to occur every day. A 2-day interval schedules watering to occur every-other day. A 31-day interval is the maximum schedule, providing watering only once every 31 days. Since the interval schedule is not tied to specific days of the week, you will also need to determine when the interval will start, by selecting the current day within the Interval.

- **Day Exclusion** – When using the **Odd/Even** or **Day Interval** watering day schedule, watering will not always occur on the same days each week. To prevent watering on a specific days, for example, watering-restricted days, specific days of the week can be easily excluded from the schedule.








**NOTE:** Each program can only have one assigned watering schedule format. If either an Interval or Odd/Even schedule is currently set, it must be turned Off first to enable an optional format to be selected.






### To Set Calendar Days:

1. Turn the Function Dial to Calendar **Days** .
2. Sunday will be displayed and selected to water indicated by the water  icon.  
To exclude the day from the schedule, press the  or  button to display the No Water  icon.
3. Press the  button to select the next day.
4. Repeat step 2 and 3 to schedule the remaining days of the week.

### To Set Odd or Even Days:








1. Turn the Function Dial to the **Odd/Even**  position.
2. Press the  or  button to select **ODD** or **EVEN**.
3. To exclude specific days from watering, press the  button to select the day.
4. To exclude the day from the schedule, press the  or  button to display the No Water  icon.
5. To exclude additional days (7 maximum), repeat steps 4 and 5.

### To Set Interval Days:

1. Turn the Function Dial to Interval **Days** .
2. The **CYCLE LENGTH** prompt and the current Interval (**01–31 DAY** or **-- -- -- [Off]**) will be displayed.
3. Press the  or  button to select the Interval cycle length.

**NOTE:** The cycle length can be set from 01 (water every day) to 31 (water once every 31 days). The Interval cycle starts at 01 and increases by 1 digit each day. The watering day occurs when the selected Interval cycle length is reached.

To specify when the first watering day will occur, the current day within the Interval cycle must be selected. For example, if a 04 DAY Interval is entered and watering is to begin in one day, select 03 as the Current Day.

4. To select the Current Day in the Interval cycle, press the  button to display the **CURRENT DAY** prompt.
5. Press the  or  button to select the value (01–selected Interval number).
6. To exclude specific days from watering (7 maximum), press the  button to select the day.
7. To exclude the day from the schedule, press the  or  button to display the No Water  icon.
8. Repeat steps 6 and 7 to continue excluding days.

**STOP – This concludes the basic program setup procedures. Repeat these procedures starting at “Select the Program” on page 6 for each program you wish set up at this time.**



## Season Adjust Feature




The Season Adjust feature enables the cumulative program run time to be easily increased or decreased by a percentage factor from 0% (Off) – 200%, in 10% increments. Season Adjust can be applied to individual programs and globally to all programs by selected months of the year.

When a Season Adjust factor is applied by program and by month, the adjusted program duration is the result of the combined percentage factors.

For example, program **A** has a total station run duration of 60 minutes with an 80% Season Adjust value applied to the program. The adjusted run time for program **A** is 48 minutes. In addition, a 50% Season Adjust value is applied to the month of December. The resulting cumulative run time for program **A** during December will be 24 minutes.




**Example:** 60 minutes x 80% (.80) = 48 minutes x 50% (.50) = 24 minutes.

**NOTE:** By selecting the program **Review** function, you can instantly view the total run time of each program adjusted for all operating factors including: timed delays, repeat cycles and Season Adjust %. See “Program Review Feature” on page 20 for additional information.

1. Set the Program Switch to select program **A**, **B**, **C**, or **D**.
2. Turn the Function Dial to **Season Adjust** .
3. Press the  or  button to adjust the % value for the selected program.

**NOTE:** Adjusting the % value to **Off** prevents operation of the program.


**NOTE:** As a runoff-prevention measure, selecting a Season Adjust % factor over 100% will automatically split the adjusted program run time in half and run a repeat (back-to-back) program watering cycle.

4. Press the  button to select Season Adjust (for all programs) by month (01 = Jan, 02 = Feb, etc).
5. Press the  or  button adjust the % value.

**NOTE:** Adjusting the % value to **Off** prevents operation of all programs for the entire month.

**NOTE:** The % symbol will be displayed to indicate when a Season Adjust % factor is applied.

## Special Functions





The following program setup options and control parameters are provided in the **Special Functions**  dial position.

**NOTE:** To review the factory default settings for each function, refer to “Appendix D - Controller Default Settings” on page 31.

- Set delay period between sequential stations within a program cycle
- Set Pump Start/Master Valve operation by specific programs
- Set Pump Start/Master Valve operation for specific stations
- Set delay period between pump start/master valve and station sequence
- Set Pump Start/Master Valve operation during station delay
- Set program cycle repeat and delay options
- Select program stacking or overlap options
- Erase program memory by specific program
- Set handheld remote control option
- Select display language format
- Select 12- or 24-hour clock format
- Select station time
- View controller firmware version.

### Setting Station Delay Time Option

This feature enables a delay period to be entered between sequential stations within a watering cycle. This option is generally used when irrigation demand exceeds the supply capacity, as can occur when the supply is pumped from a well or reservoir. The delay period is adjustable from Off to 59 seconds in 1-second increments, or 1 to 60 minutes in 1-minute increments.

1. Set the Program Switch to select program **A**, **B**, **C**, or **D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button (as needed) to display **SD -- --** (Station Delay – Off).
4. Press the  or  button to select the delay time.





**NOTE:** The time value will change from seconds to minutes as the display scrolls past 59 seconds. Minutes value is displayed as 1M – 60M.

### Setting Master Valve/Pump Start Options







The TMC-424E allows you to set Master Valve/Pump Start (MV/PS) operation by individual program and by individual station as preferred. By default, operation of all programs and all stations will activate the MV/PS circuit. The following procedures are primarily used to exclude specific programs and/or stations from MV/PS operation.

**NOTE:** A program must have the MV/PS control option enabled to permit individual stations assigned to the program to be excluded from MV/PS operation. In other words, assigning MV/PS operation by station is not applicable unless MV/PS operation for its assigned program is enabled.

#### • Master Valve/Pump Start Operation by Program





1. Set the Program Switch to select program **A, B, C, or D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button to display **MVA -- Y** (Master Valve [program A] - Yes [on]).
4. To exclude the selected program from MV/PS operation, press the  or  button to select **MV[A] – N** (Master Valve [program A] – No).

#### • Master Valve/Pump Start Operation by Station

1. Press the  button to display **MVS -- N** (Master Valve Stations – No).
2. To access this option, the option must first be enabled by pressing the  or  button to select **MVS -- Y** (Yes). By default, all station identifiers will be solid circles (all enabled).
3. Press the  button to select **MV -- Y 01** (Master Valve--Yes, station 01). The station identifier will begin flashing.
4. Press the  button to exclude selected station, or press the  button to skip the station. When excluded, the station identifier will change from solid to hollow. The next station identifier in sequence will begin flashing.
5. Repeat the procedure in step 4 as needed for each station.





#### • To Set Pump Delay

This feature enables a delay period from 1 to 60 seconds to occur after the MS/PS circuit is activated, and prior to the start of the first station in the watering sequence. This delay feature is often used in conjunction with the Station Delay (SD) feature.

1. Set the Program Switch to select program **A, B, C, or D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button (as needed) to display **PD -- --** (Pump Delay Off).
4. Press the  or  button to select the delay time value from 01 to 60 seconds.








 

 
#### • To Set Pump Enable

This feature allows you to enable or disable MV/PS operation for the duration of a Station Delay period.

1. Set the Program Switch to select program **A, B, C, or D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button as needed to display **PE -- N** (Pump Enable - No [Off]).
4. Press the  or  button to select **PE -- Y** (Pump Enable - Yes [On]).

## Setting Watering Cycle Repeat Option

This option enables a program watering cycle to automatically repeat operation from 1 to 30 times per program start.





1. Set the Program Switch to select program **A, B, C, or D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button as needed to display **CYC --N** (Cycle [repeat] - No [Off]).
4. Press the  or  button to select **CYC --Y** (Cycle [repeat] - Yes [On]).
5. Press the  button once to display **RPT --** (Repeat (none)).
6. Press the  or  button to select the number of repeat cycles from 01–30 (1 repeat = 2 watering cycles).
7. Press the  button to select **DL -- --** (delay period between repeat cycles).
8. Press the  or  button to select the delay period, Off (– – –) to 59 seconds in 1-second increments or 1–60 minutes in 1-minute increments.

## Setting Program Stack/Overlap Option

This option determines if multiple programs will be constrained to single-file operation (stacked) or enabled to operate 2 or 3 programs concurrently (overlap).

**⚠ CAUTION:** Before selecting the overlap option, ensure the hydraulic capacity of the irrigation system and the controller's maximum current load will not be exceeded when multiple stations (including master valve/pump start circuits) operate concurrently.

 



Refer to “Appendix B – TMC-424E Current Load Data” on page 29 for additional information.

1. Turn the Function Dial to **Special Functions** .
2. Press the  button as needed to display **1PROG** (stack).
3. Press the  or  buttons to select **2PROG** or **3PROG** (overlap).

**NOTE:** When operating multiple programs in the stacked mode, any watering cycle that extends past midnight into the next day will continue operating until finished. However, any program cycle start times remaining in queue after the day change to an unscheduled watering day, will be canceled. This rule applies to all automatic and manual operations.





## Erase Program Memory

Erasing the program memory will remove all user-defined information including run times, start times and day schedule from a specified program. Additionally, all control options specified for the program will be reset to factory defaults.

1. Set the Program Switch to select program **A**, **B**, **C**, or **D**.
2. Turn the Function Dial to **Special Functions** .
3. Press the  button as needed to display **ERASE**.
4. Press the  button once to display **OK?** To initiate the erase function, press the  button again to display **DONE**.





## Selecting Handheld Remote Operation

The TMC-424E is equipped for use with the Toro TMR-1 handheld remote. By default, remote control operation is enabled. To disable operation with TMR-1 receiver, using the following procedure.

1. Turn the Function Dial to **Special Functions** .
2. Press the  button as needed to display **HH – Y** (Hand Held – Yes)
3. Press the  or  buttons to select **HH – N** (Hand Held – No).





## Selecting Display Language Option

The TMC-424E displays word prompts in English (ENG) by default and offers five additional languages preferences as follows: Spanish (ESP), French (FRA), Italian (ITA), German (DEU) and Portuguese (POR).

1. Turn the Function Dial to **Special Functions** .
2. Press the  button as needed to display **ENG** (or the current language).
3. Press the  or  buttons to select the desired language.





## Selecting 12/24-hour Time Display Option

This feature enables the clock time display to be changed from 12-hour (am./p.m.) format to a 24-hour clock format.



1. Turn the Function Dial to **Special Functions** .
2. Press the  button as needed to display **12H**.
3. Press the  or  buttons to select **24H**.

## Selecting Run Time Format

This feature enables the station run time to be selected in seconds increments in addition to minutes and hours increments.

1. Turn the Function Dial to **Special Functions** .
2. Press the  button as needed to display **SEC – N** (Seconds – No).
3. Press the  or  buttons to select **SEC – Y** (Seconds – Yes).

## Manual Operations





The TMC-424E offers several manual operation methods. A separate Function Dial position is provided for Manual Station  and Manual Program  operations

**NOTE:** All program control options selected within Special Functions will also apply to all manual control operations.

### Manual Station Operations

The TMC-424E offers two ways to manually activate individual stations: True manual, to operate a selected station without a specified run time, and Timed manual to operate selected stations with an assigned temporary run time.









#### • True Manual Operation


1. Turn the Function Dial to **Manual Station** .
2. Press the  button as needed to select the station number.
3. Press the  button to turn on the station. ON will be displayed with the .

**NOTE:** The station will run continuously until a navigation button is pressed or the Function Dial is turned. The station will turn off automatically at Midnight.

 **IMPORTANT:** Flow thresholds do not apply during True Manual and Timed Manual operations.

#### • Timed Manual Operation

1. Turn the Function Dial to **Manual Station** .
2. Press the  button to select the station number.
3. Press the  or  buttons to select a manual run time (1 minute – 8 hours).
4. To select additional stations, repeat steps 2 and 3.
5. When station selections have been made, turn the Function Dial to **RUN** .
  - The operating station number(s), remaining station run time and the  icon (flashing) will begin alternating with the current time of day.
  - The stations will operate in the order selected, either sequentially or concurrently as determined by the **Stack/Overlap** option selection.
  - Automatic mode will resume when the manual operation has been completed.
  - To advance through the station sequence, press the  button.
  - To terminate manual operation at any time, turn the Function Dial to **OFF** .









When the display stops flashing, turn the dial to **RUN** .

## Manual Program Operations









This type of manual watering is also known as “Semi-automatic” operation. When a program is started manually, it runs through the watering cycle as if started automatically. A single program can be operated, or multiple programs can be run in sequence or simultaneously.

**NOTE:** All automatic program control options selected within Special Functions will also apply to all manual operations.

### • Single Program Operation

1. Turn the Function Dial to **Manual Program** .
2. Set the Program Switch to select program **A**, **B**, **C**, or **D**. The program letter and **MAN** will be displayed. All stations assigned to the program will be indicated by solid circles.
3. Press the  button to start the watering cycle. The first station in sequence will turn on. The program identifier and  icon will begin flashing.
4. Turn the Function Dial to **RUN** .
  - The operating station number, remaining station run time and the  icon (flashing) will begin alternating with the current time of day.
  - The stations will operate one at a time in numeric sequence.
  - Automatic mode will resume when the manual operation is finished.
  - To turn off an active station and start the next station in sequence, press the  button.
  - To end manual operation at any time, turn the Function Dial to **OFF** , wait for the display to stop flashing, then turn the dial to **RUN** .


### • Multiple Program Operation

1. Turn the Function Dial to **Manual Program** .
2. Set the Program Switch to select program **A**, **B**, **C**, or **D**.
3. Press the  button to start (or queue) the program. The program identifier and  icon will begin flashing.
4. To select additional programs, repeat steps 2 and 3.
5. Turn the Function Dial to **RUN** .
  - The operating program identifier, station number(s), remaining station run time and  icon will begin alternating with the current time of day.
  - The programs will operate in the order selected, either sequentially or concurrently as determined by the **Stack/Overlap** option selection.
  - Automatic mode will resume when the manual operation is finished.
  - To turn off an active station and start the next station in sequence, position the Program Switch (if needed) to select the program, then press the  button.
  - To end manual operation at any time, turn the Function Dial to **OFF** . When the display stops flashing, turn the dial to **RUN** .

## Flow Sensor Operations

Flow monitoring is one of the best water resource management tools available in the irrigation industry today. With definable under-, over- and critical-flow limits set, broken lateral or mainline piping, stuck valves or damaged sprinklers can be quickly detected and bypassed automatically.

The TMC-424E accepts up to three flow-sensing expansion modules (flow modules) that enable the controller to read, store and compare flow rate data from individual flow meters. Each station connected to a flow-enabled expansion module has the option of being flow monitored. After a defined delay period (Fill Delay), a flow measurement is taken. If the station flow rate exceeds any of the established thresholds, an alert is triggered; the station is bypassed and operated at the next scheduled watering time.

After inserting a flow-sensor expansion module, the flow sensor icon  is displayed and the following control features become accessible:

- Select flow sensing operations by individual station
- Automatically read and learn the flow rate of each station
- Measure flow as part of normal irrigation operation
- Set lower, upper and critical flow thresholds
- Immediately disable station and flow module master valve operation if flow rate exceeds a critical flow threshold.





**NOTE:** The actual or “Learned” flow rate for each station should be established prior to setting alert thresholds. To perform this operation, the Valve Test function, True Manual or Timed Manual station operations can be used to operate each station for a two-minute run time required to establish the Learned flow rate.

### Flow Module Setup Procedure

**NOTE:** The TMC-424E is designed for use with Toro TFS series flow sensors only. Consult with an authorized Toro distributor prior to connecting other flow sensor makes. For complete TFS flow sensor installation and setup information, refer to the user’s guide provided with the unit.



#### • Select Fill Delay option:




The fill delay period helps prevent false sensor readings caused by initial turbulence within long main line runs. Fill delay setting postpones flow sampling up to 9 minutes after irrigation begins.



1. Turn the Function Dial to **Sensors** .
2. Set the Program Switch to select program **A**, **B**, **C**, or **D**.
3. Press the  button as needed to display **FIL: 0M** (Fill delay – 0 minutes).
4. Press the  or  button to select a delay period (1 – 9 minutes in 1-minute increments or leave at 0M if a fill delay is not required).
5. Repeat this procedure for each program as needed, starting at step 2.



### • Select Flow Sensor Module Master Valve Type




1. Press the  button to display **MV:NC** (Master Valve: Normally Closed).  
If the flow module does not control a master valve, press the  button twice to skip this setting.

**NOTE:** When multiple flow sensor modules are installed, the first module in sequence will be selected (designated by the flow sensor icon ).  
To change the module selection, press the  or  button.









2. To change the master valve type to Normally Open, press the  or  button to select **MV:NO** (Master Valve: Normally Open).

**NOTE:** A Normally Open master valve must be energized to remain closed. Therefore, the master valve will remain open when the controller is idle. However, if a flow alert is triggered, the master valve (controlled by the flow sensor module) will be energized (closed).




### • To set flow rate alert thresholds:

1. Press the  button to display **NF -- --** (Nominal Flow – Off). Nominal flow threshold is the maximum allowable flow while the controller is idle. A flow alert is triggered if flow is detected **above** this setting.
2. Press the  or  button to select a value from 01 to 99 PPS (pulses per second). Select -- -- (Off) to disable this threshold.









**NOTE:** Refer to page 28 for important flow sensor performance data.

3. Press the  button to display **CLR:LF** (Clear: Learned Flow).
  - To retain the current learned flow value, press the  button to skip this setting.
  - To clear the current learned flow value, press the  button to display **OK?**. Press the  button again. Continue when **DONE** is displayed.
4. Press the  button to display **FLO -- N** (Flow – No), flow sensing option for the selected station.
  - To enable flow sensing for the selected station, press the  or  button to display **FLO-Y** (Flow –Yes).
  - To bypass flow sensing for the selected station, press the  button. The next station in sequence will be selected.

**NOTE:** Flow sensing setup parameters (Over-flow, Under-flow, Critical-flow and Learned-flow) are available only to stations that have flow sensing enabled.

5. Press the  button to select **OF -- --** (Over Flow – Off). This setting establishes the alert threshold for a flow rate **above** the Learned Flow.
6. Press the  or  button to select a value from 10–100%, (in 10% increments). Select -- -- to disable this threshold.

(continued)


7. Press the  button to select **UF -- --** (Under Flow – Off). This setting establishes the alert threshold for a flow rate **below** the Learned Flow.
8. Press the  or  button to select a value from 10–100%, (in 10% increments). Select -- -- to disable this threshold.
9. Press the  button to select **CF -- --** (Critical Flow – Off). This setting establishes the alert threshold for a flow rate **above** the Learned Flow.
10. Press the  or  button to select a value from 10–100% (in 10% increments). Select -- -- to disable this threshold.  
**NOTE:** If a Critical Flow alert is triggered, operation of all stations (and master valve) monitored by the flow sensor will be immediately terminated.
11. Press the  button to select Learned Flow (**LF**). If the Learned flow rate has been previously established, the PPS value is displayed. If the Learned flow has not been established, the display will indicate **LF -- --**.  
**NOTE:** The learned flow rate for each station (assigned to flow monitoring) will be automatically recorded the first time it is operated.  
For PPS/GPM conversion information, see chart on page 28.
12. Press the  button. Repeat the flow sensor setup parameters for each station starting at step 4 on page 17.

## Rain Sensor Control Features

### Rain Sensor Timed Bypass





Rain sensor input can be manually overridden by placing the sensor control switch in the bypass position (see item 10, page 4). An alternate method of controlling rain sensor input is by enabling the Timed Bypass feature. When enabled, Timed Bypass overrides rain sensor input and sensor bypass switch function, enabling the controller to continue irrigation operations regardless of rain sensor input.

By default, the Timed Bypass mode is Off until it is enabled. Once enabled, rain sensor input will be bypassed for the remainder of the day. At midnight, Timed Bypass mode is terminated, enabling normal rain sensor operations to resume.

1. Turn the Function Dial to **Sensors** . **TBP - N** (Timed Bypass – No) is selected by default.
2. Press the  or  button to select **TBP-Y** (Timed Bypass – Yes).

## Rain Sensor Control by Program

This unique TMC-424E feature enables rain sensor control input to be enabled/disabled for specific programs. By default rain sensor input is active for all programs.







1. Turn the Function Dial to **Sensors** .
2. Set the Program Switch to select program **A, B, C, or D**.
3. Press the  button as needed to select **RS(A) - - Y** (Rain Sensor [program A] Yes (default)).
4. Press the  or  button to select **RS(A) - - N** (Timed Bypass – No).
5. Repeat steps 2–4 for each program as required.


## Valve Test Feature



This feature allows you to quickly operate of each station for short period of time for a convenient initial system check, periodic maintenance, spring start-up etc. The preset time for each station is two minutes but can be quickly adjusted from 30 seconds to 10 minutes as desired.

**NOTE:** Only stations with a run time (assigned to any program) will be included in the test operation.

**⚠ IMPORTANT: Flow thresholds do not apply during Valve Test operation.**

1. Turn the Function Dial to **Valve Test** . The display will show **2 M** (2 minutes) of run time per station.
2. Press the  or  buttons to change the run time of all stations from 30 seconds to 10 minutes.
3. Press the  button. The program identification letter will begin flashing and water on icon will be displayed.
4. Turn the Function Dial to **RUN** . All station numbers with assigned run time in any program will be displayed. The currently operating station number and the  icon will be flashing. The stations will operate one at a time in numeric sequence. The automatic mode will resume when the valve test operation is finished.





**NOTE:** To turn off an active station and start the next station in sequence, press the  button. Review operation will be terminated when the last station number displayed has completed it's run time or has been skipped.

**To terminate operation at any time**, turn the Function Dial to **OFF** . Wait for display to stop flashing, then turn the dial to **RUN** .

## Rain Delay Feature




The Rain Delay and Season Adjust control features enable quick, temporary changes in operation to help compensate for changes in weather and season.

Rain Delay enables all automatic watering operations to be delayed from 1 to 14 days. For example, rain is forecast in your area for the next two days. Instead of turning the controller off and possibly forgetting to turn it back on, a 3-day delay can be easily set. At the end of 3 days, the controller will resume automatic operation as scheduled.

1. Turn the Function Dial to **OFF** .
2. Press the  or  button to select the number of days to delay operation from 1 to 14.
3. Turn the Function Dial to **RUN** .

**NOTE:** OFF and the number of rain delay days remaining until automatic operation resumes will be displayed (alternating with the current time). The rain delay day number will decrease by one at each day change.

Automatic operation will resume when the watering delay day number is no longer displayed.




4. To terminate the rain delay function, turn the Function Dial to **OFF** .
5. Press the  button until only OFF is displayed.
6. Turn the Function Dial to **RUN** .

## Program Review Feature

The Program Review feature provides a convenient method of reviewing all user-defined programming information.

Program elements will be displayed as follows:

- Total program cycle duration, factored for Season Adjust %, delays and repeats.
- Total irrigation time (time irrigation actually occurs), factored for Season Adjust %, delays and repeats.
- Watering day schedule type (Calendar, Odd/Even of Interval)
- Program start times
- Station run times
- Rain Sensor assignment by program
- All flow settings (when flow sensing option is used).

1. Turn the Function Dial to **Review** .
2. Set the Program Switch to select the program to be reviewed.
3. Press the  button to index through the program information.
4. When finished, turn the Function Dial to **RUN** .

## Installation Instructions

### Preparing the Cabinet for Installation

1. Swing open the timing mechanism to access the internal components and wiring access holes.
2. Five wiring access holes are provided in the bottom of the cabinet as follows:


**A-** 1/2" (13mm) for power and equipment ground wires.

**B-** Two 1/2" (13mm) knock-outs for the optional rain sensor or handheld remote wiring.

**C-** Two 3/4" (19mm) 1"(25mm) knock-outs for field wires.

**NOTE:** Removing all applicable knock-out plugs prior to cabinet installation is recommended.

**NOTE:** Install electrical conduit as specified by applicable electrical and/or building codes. (Wire, electrical conduit and conduit fittings are not provided.)

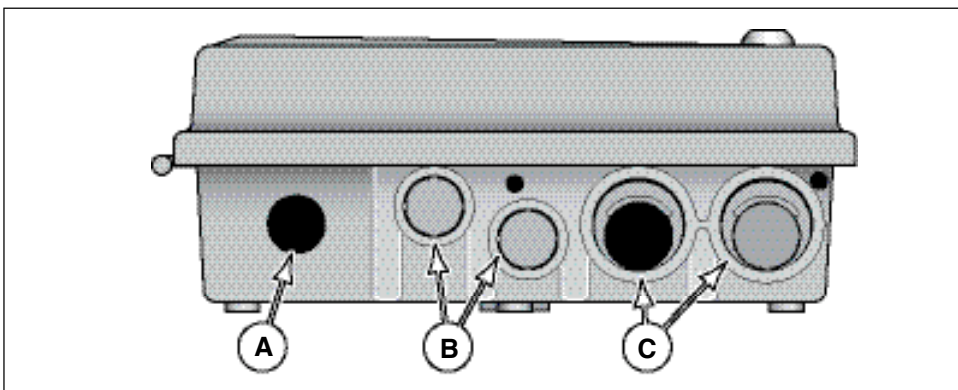

### Selecting an Appropriate Installation Site

Select an installation site for the TMC-424 controller that will provided the following conditions:


- Protection from direct exposure to irrigation spray, midday sun, wind and snow.
- Access to all field and optional accessory wiring.
- Access to a grounded AC power source that is not controlled by a light switch or shared by a major appliance, motor-driven equipment.
- (Indoor controller models only) – within 4' (1.2m) of a grounded electrical outlet.

## Cabinet Installation

1. Drive a wood screw into the wall within eye level until only 1/4" (10mm) of the screw is exposed.

**NOTE:** If installing the controller on drywall or masonry, install the appropriate type screw anchors.

2. Hang the cabinet on the screw using the keyhole slot.
3. Open the controller cabinet and swing open the timing mechanism to access the lower mounting screw location.
4. Install the lower mounting screw in the hole provided and tighten securely.
5. Fill out the provided Watering Schedule form with program and system details. Affix the provided velcro disks to the form in the designated locations. Attach the form to the inside of the cabinet cover.

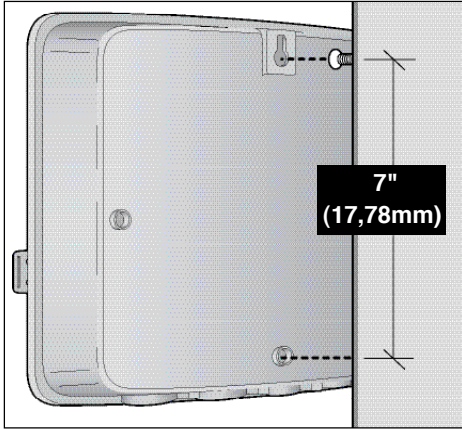


## Field Wire Connections

**NOTE:** Using 14–18 AWG (2–1mm<sup>2</sup>) multi-strand irrigation hookup cable for field wire connections is recommended. This cable is made specifically for underground installation and is available in various lengths and conductor count. Select a cable that has at least one conductor for each valve connection and one conductor to provide a valve common connection.

1. Route the valve control wires between the valves and the controller.
2. Attach the white wire to either lead from each valve solenoid to provide a valve common wire.
3. Attach a separate wire to the remaining valve solenoid lead of each valve.

**NOTE:** For reference when making wire connections at the controller, note of the wire color used for each control valve connection and the corresponding watering zones.


4. Secure all wire splices using water-proof wire connectors or any appropriate method of protecting wire splices from direct contact with soil or moisture.
5. Route the cable into the controller through one of the 3/4" (19mm) access holes in the base of the housing or through the PVC conduit (if installed). Strip insulation back 3/8" (10mm) for wiring terminal connections.
6. Secure the field common wire(s) to common terminal(s) (C).
7. Secure the individual valve wires to the appropriate expansion module station output terminals
8. Connect one wire from the master valve or pump start relay to terminal (P).

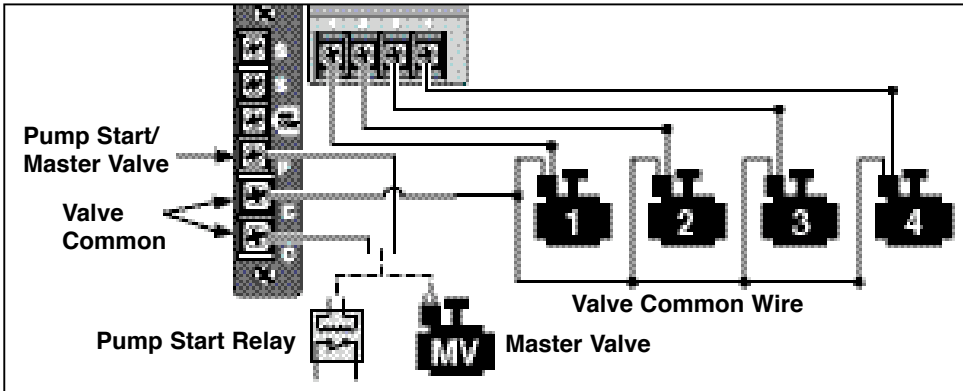

**⚠ CAUTION:** To avoid possible equipment damage, do not connect pump starter directly to the controller. A 24V, 0.5A (maximum) relay must be used for this connection.

### Flow Sensor Connection

1. Route the flow sensor wires into the controller cabinet.

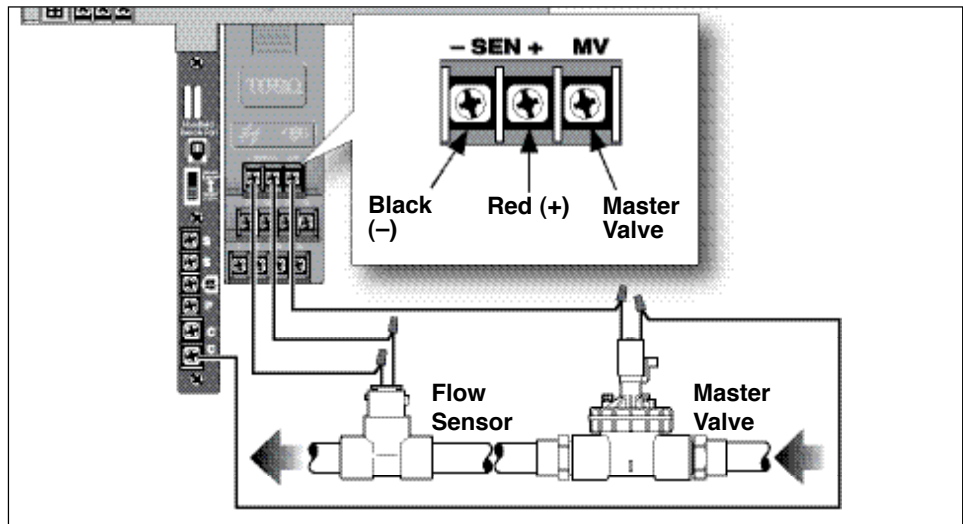

2. Connect the flow sensor wires to the flow-enabled expansion module as follows: Black to negative (-) and Red to positive (+).

**NOTE:** Flow Sensor wiring polarity must be correct to enable operation.

3. If the master valve circuit is used, connect either solenoid wire to the **MV** terminal and the remaining wire to either common terminal (**C**).

**NOTE:** The master valve circuit is controlled by operation of the corresponding expansion module only.

## Input Power Connection - Indoor Models

**NOTE:** Unlike most indoor-type controller models, the TMC-424E-ID model incorporates an internal transformer. A Class C power cord and strain relief are supplied for connection of the transformer terminal block to a grounded wall outlet.

1. Remove the transformer compartment cover secured by two phillips screws.
2. Referring to the illustration, install the strain relief and tighten securely using appropriate hand tools.

**NOTE:** Power cord assembly will vary by controller model.


3. Insert the power cord through the strain relief.
4. Connect the power cord wires to the terminal block as follows:

### 120 VAC Models:

Black to **L**, White to **N** and Green to ground  $\perp$ .

### 230 VAC Models:

Brown to **L**, Blue to **N** and Green/Yellow to ground  $\perp$ .

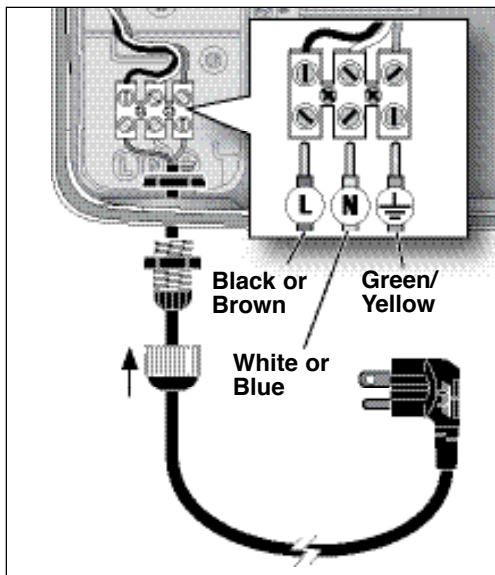

5. Tighten the bottom strain relief nut using an appropriate hand tool. Pull lightly on the power cord to confirm proper retention.




## Input Power Connection - Outdoor Models

**⚠ WARNING:** AC power wiring must be installed and connected by qualified personnel only. All electrical components and installation procedures must comply with all applicable electrical codes. Some codes may require a means of disconnection from the AC power source installed in the fixed wiring and having a contact separation of at least 0.120" (3mm) in the line and neutral poles. Make sure the power source is OFF prior to connecting the controller.

1. Remove the transformer compartment cover secured by two phillips screws.
2. Install 1/2" (13mm) conduit from the power supply to the controller.
3. Route the AC power and equipment ground wires from the power source, through the conduit and into the transformer compartment.

**NOTE:** The controller terminal block accepts wire size up to 12 AWG (3mm<sup>2</sup>).

4. Secure the wires to the terminal block as follows: Hot or Mains 1 to **L**, Neutral or Mains 2 to **N** and equipment ground to **⊕**.
5. Reinstall the transformer compartment cover and apply power to the controller.

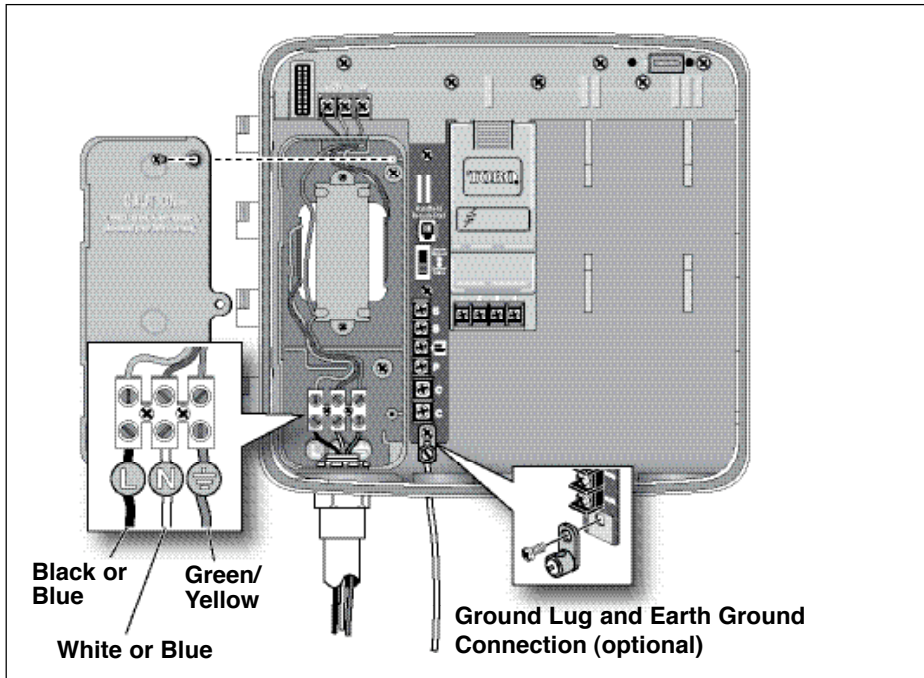


**NOTE:** In lightning-prone areas, an earth-ground connection may be necessary to provide adequate surge protection. An (optional) ground lug can be easily installed to facilitate a ground wire connection. Contact your local Toro irrigation distributor for specific grounding recommendations.

## Rain Sensor Installation (Optional)

All Toro rain sensors, including wireless models TWRS and TWFRS (rain/freeze), and wired version TRS, can be connected directly to the TMC-424E to automatically interrupt irrigation when the preset rain or (freeze) threshold is met.

A sensor bypass switch is provided to override sensor operation as needed. Refer to page 18 for additional Rain Sensor operating information.


When the sensor absorbs moisture, it signals the TMC-424E to suspend automatic watering operations. While irrigation is suspended, SEN is displayed. When the sensor automatically resets (or is bypassed) enabling the controller to return to automatic operation, the controller will return to normal program operation.

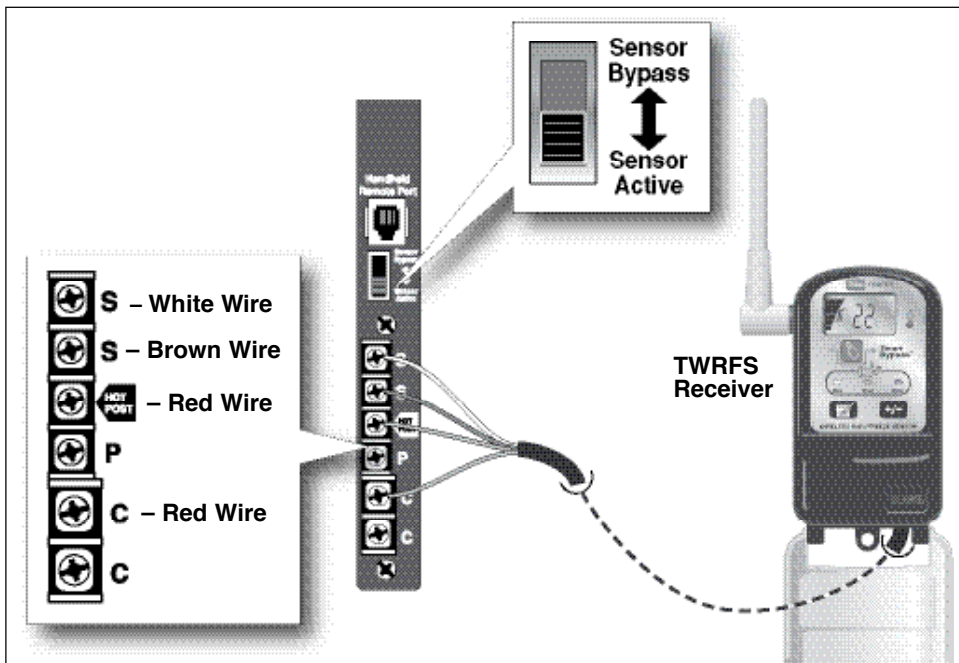

1. Route the sensor wires from the device into the controller housing through the provided access hole.
2. Remove the jumper wire installed between the sensor terminals.
3. Connect the white wire to the top sensor (S) terminal. Connect the brown wire to the remaining sensor (S) terminal. Connect one (either) red wire to the Hot Post, and the remaining red wire to a station common (C) terminal.
4. Set the sensor switch to the **Sensor Active** position.
5. Refer to the instructions provided with the rain sensor for detailed installation and set up information.

### Toro TMR-1 Handheld Remote Installation (Optional)

The TMC-424E is equipped for operation with the Toro TMR-1 handheld remote control. A handheld control option is provided in Special Functions that enables/disables handheld operation. By default operation is enabled. Refer to page 13 to disable handheld remote operation.

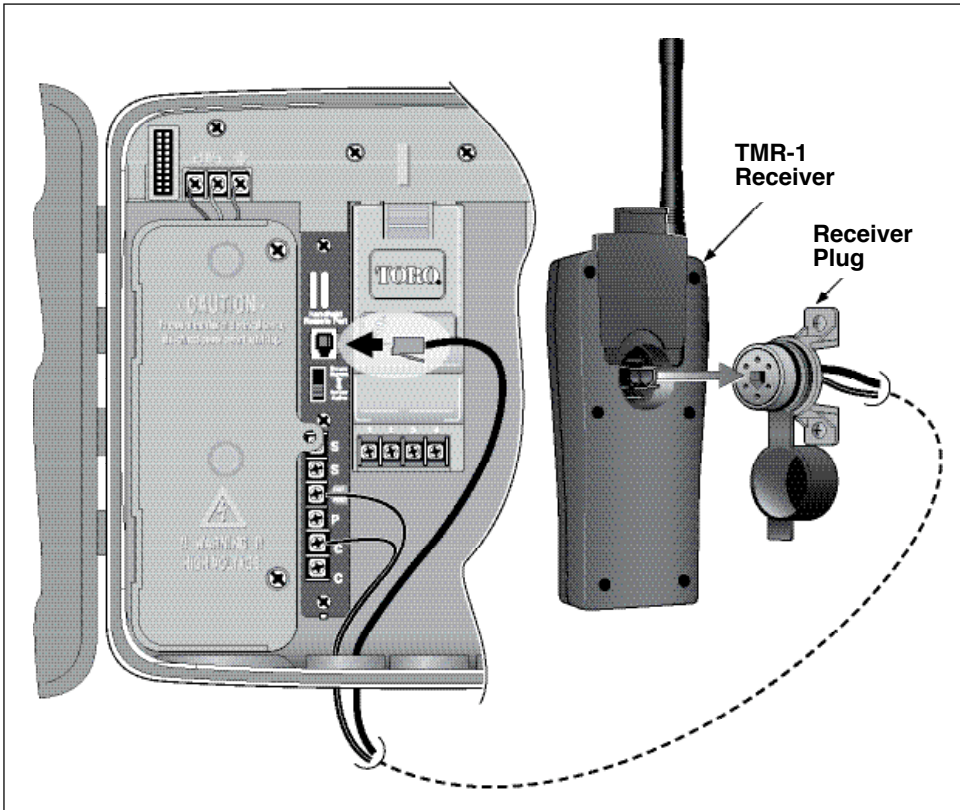


1. Install the TMR-1 remote receiver plug assembly according to the user's guide provided with the TMR-1 kit.
2. Route the receiver power wires and control cable into the cabinet through one of the available knock-out access holes.
3. Connect either power wire to the **Hot Post** terminal, and the remaining power wire to a station common (**C**) terminal.
4. Plug the RJ-11 connector into the Handheld Remote Port receptacle.
5. For complete handheld remote operating information, refer to the user's guide provided with the TMR-1 kit.

## Appendix A – TFS Series Flow Sensor Performance Data

Sensor Model	TFS-050	TFS-075	TFS-100	TFS-150	TFS-200	TFS-300	TFS-400
Size	1/2" (13mm)	3/4" (19mm)	1.0" (25mm)	1.5" (38mm)	2.0" (51mm)	3.0" (76mm)	4.0" (102mm)
K Value	00.78	0.1563	0.26112	1.699	2.8249	8.309	13.74283
Offset	0.9	0.9	1.2	-3.016	0.1435	0.227	0.23707
Min. GPM	1.5	3	5	5	10	20	40
Max. GPM	10	20	30	100	200	300	500
Learned Flow (PPS)	Equivalent GPM *						
5	0.5	1.0	1.7	8.0	14.7	43.5	72.0
10	0.5	1.8	3.0	16.5	28.9	85.0	140.7
15	1.3	2.5	4.3	25.0	43.1	126.6	209.5
20	1.7	3.3	5.6	33.5	57.3	168.1	278.2
25	2.1	4.1	6.9	42.0	71.5	209.7	346.9
30	2.5	4.9	8.2	50.5	85.7	251.2	415.6
35	2.9	5.7	9.5	59.0	100.0	292.8	484.3
40	3.2	6.4	10.8	67.5	114.2	334.0	553.0
45	3.6	7.2	12.1	76.0	128.4	375.8	621.7
50	4.0	8.0	13.4	84.5	142.6	417.4	690.4
55	4.4	8.8	14.7	93.0	156.8	458.9	759.2
60	4.8	9.6	16.0	101.5	171.0	500.5	827.9
65	5.2	10.4	17.3	109.9	185.2	542.2	889.6
70	5.6	11.1	18.6	118.4	199.5	583.6	965.3
75	6.0	11.9	19.9	126.9	231.7	625.1	1034.0
80	6.4	12.7	21.3	135.4	227.9	666.7	1102.7
85	6.8	13.5	22.6	143.9	242.1	708.2	1171.4
90	7.1	14.3	23.9	152.4	256.3	749.7	1240.2
95	7.5	15.0	25.2	160.9	270.5	791.3	1308.9
100	7.9	15.8	26.5	169.4	284.7	832.8	1377.6
105	8.3	16.6	27.8	177.9	299.0	874.4	1446.3
110	8.7	17.4	29.1	186.4	313.2	915.9	1515.0
115	9.1	18.2	30.4	194.9	327.4	957.5	1583.7
120	9.5	18.9	31.7	203.4	341.6	999.0	1652.4
125	9.9	19.7	33.0	211.9	355.8	1040.6	1721.2

### NOTE:

-  = Do not operate in this region
- TMC-424E maximum PPS = 125
- To convert GPM to LPM, multiply x 3.79
- If installed flow sensor measures in units other than PPS, contact your Toro distributor for assistance.

## Appendix B – TMC-424E Current Load Data

### Determining Maximum Current Load

The reference table below provides various current load combinations that may be encountered when using multiple programs running simultaneously with Master Valve/Pump Start control options.

The number of 24 VAC loads based on one station/valve operating per program are listed in the Station Valves row. The Master Valve and Pump Start values are based on one load per circuit and one or two Flow Modules each utilizing the individual Master Valve control output.

### TMC-424E – Output Current Load

	Acceptable									Marginal		Exceeds Limit					
Station Valves	1	1	1	2	1	1	2	2	3	2	3	2	3	3	3	3	3
Master Valves	0	0	1	0	2	1	1	0	0	1	1	2	0	1	2	2	3
Pump Start	0	1	0	0	0	1	0	1	0	1	0	1	1	1	0	1	0
Total Current	0.3	0.6	0.6	0.6	0.9	0.9	0.9	0.9	0.9	1.2	1.2	1.5	1.5	1.5	1.5	1.8	1.8

**NOTE:** The maximum total current load permitted is 1.20A @24 VAC. The valve and relay loads shown in the chart are based on 0.30A @ 24 VAC (nominal). Actual current draw will vary with make, model, configuration, and size of valves and/or relays utilized. Refer to the manufacturer's electrical specifications and recalculate the maximum number of loads permitted based on actual values.

## Appendix C: Display Alerts

### FUSE – Station and MV/PS output alert

The TMC-424E features built-in circuit protection to help prevent damage to the controller caused by an over-current condition on any output terminal.

If the controller detects an overload condition, it will bypass the affected output and display the word **FUSE** with the affected station number identifier(s). All remaining stations will operate as programmed for automatic operation.

If the condition occurs on the Pump Start/Master Valve circuit, all stations using the master valve will prompt the **FUSE** message.

**To clear the warning**, press **any** button. The controller will continue to operate as scheduled and will attempt to run all stations as programmed.

**⚠ IMPORTANT: Clearing the display does not correct the problem. The controller will retry the affected station(s) at each programmed watering cycle and bypass the affected station(s) until the problem is corrected.**

**Before continuing to operate the controller, identify and correct the source of the problem. In most cases, the FUSE alert condition is caused by a faulty valve solenoid, pump start relay and/or shorted wire splice.**

### FLOW or NFLOW – Flow sensor alarms

When flow monitoring is used, the **FLOW** error message will be displayed when a station experiences an over-, under-, or critical-flow error. In this event, the station is skipped, and the next programmed station in sequence is operated.

Error message NFLOW is displayed if the Nominal flow threshold (flow measured while controller is idle) is exceeded. When a Normally Open master valve is controlled by the flow module, it will be activated (valve closed).

**To clear the warning**, press **any** button. The controller will continue to operate as scheduled and will attempt to run all stations as programmed.

### SEN – Rain sensor active

When the rain sensor is active and all controller outputs are off, the **SEN** prompt is displayed. Rain sensor input can be bypassed with the controller's Sensor Bypass switch, the Timed Bypass feature and rain sensor receiver controls. For complete information regarding rain sensor operation, refer to the user's guide provided with the TWRS/TWRFS units.

### PAUSE – Watering suspended by TMR-1 handheld remote

When irrigation is paused using the TMR-1 handheld remote, **PAUSE** will be displayed.

**NOTE:** If an optional Display Language is in use, – **x** – will be shown.

## Appendix D: Default Settings - Abbreviations

When the TMC-424E is shipped from the factory, or the control module has been restored to factory default settings, the following control parameters are selected:

**NOTE:** The program default settings, indicated by an asterisk (\*), are restored by the Erase feature provided within Special Functions.

<b>Factory Default</b>	<b>Abbreviation</b>
Current Time – 12:00 a.m. ....	.n/a
Month – January .....	<b>JAN</b>
Year – 2008 .....	.n/a
Day – 1 .....	.n/a
*Station Times – All Off .....	.n/a
*Start Times – All Off .....	.n/a
*Calendar Days – All On .....	.n/a
*Odd/Even Days – All Off (no excluded days) .....	.n/a
*Interval Days – All Off (no excluded days) .....	<b>INT</b>
*Season Adjust – 100% (program and month) .....	<b>100 %</b>
*Station Delay – No (All Off) .....	<b>SD --</b>
*Master Valve Operation by Program – Yes (All on) .....	<b>MV[A] -Y</b>
Master Valve Exclusion by Station – No (No stations excluded) ..	<b>MVS - N</b>
*Pump Delay – No (All Off) .....	<b>PD --</b>
*Pump Enable – No (All Off during station delay) .....	<b>PE - N</b>
*Cycle Repeats/Delays – No (All Off) .....	<b>CYC - N</b>
Simultaneous Programs – 1 (stacked) .....	<b>1PROG</b>
Handheld Remote Operation – Yes (On) .....	<b>HH -Y</b>
Display Language – English .....	<b>ENG</b>
Clock Time Format – 12-hour (a.m./p.m) .....	<b>12H</b>
Seconds Time Increments – No (Off) .....	<b>SEC - N</b>
Timed Bypass – No (Off) .....	<b>TBP - N</b>
*Rain Sensor/Program – Yes (All On) .....	<b>RS[A] - Y</b>
*Main Line Fill (delay) – 0 Minutes .....	<b>FIL:0M</b>
Master Valve (type) – NC (Normally Closed) .....	<b>MV:NC</b>
Nominal Flow – All Off .....	<b>NF --</b>
Assign Station to Flow Sensor – No (All Off) .....	<b>FLO - N</b>
Overflow – All Off .....	<b>OF --</b>
Underflow – All Off .....	<b>UF --</b>
Critical Flow – All Off .....	<b>CF --</b>
Learned Flow – All Off .....	<b>LF --</b>
Rain Delay – Off .....	<b>OFF</b>

## Specifications

### Cabinet Dimensions:

- 10.5" W x 9.5" H x 5" D

### Temperature Limits:

- Operating: +14°F to +140°F (-10°C to +60°C)
- Storage: -22°F to +149°F (-30°C to +65°C)

### Power Specifications:

#### • North America

Internal Transformer, Class 2, UL Listed, CSA Certified (or equivalent)

Input: 120 VAC  $\pm$  10%, 50/60 Hz

Output: 24 VAC  $\pm$  10%, 50/60 Hz, 30 VA

#### • Europe and Australia

Internal Transformer, TUV Approved, SAA Approved

Input: 230 VAC  $\pm$  10%, 50/60 Hz

Output: 24 VAC  $\pm$  10%, 50/60 Hz, 30 VA

#### •Maximum Load Per Station:

0.5A @ 24 VAC

#### •Maximum Load Per Pump/Master Valve Circuit:

0.5A @ 24 VAC

#### •Total Maximum Load:

1.20A @ 24 VAC

### Surge Protection

- TSM-4 and TSM-8  
6.0 KV common mode; 600 V normal mode
- TSM-4H, TSM-8H, TSM-4F and TSM-8F:  
6.0 KV common mode; 6.0 KV normal mode

### Battery Type:

- 9V Alkaline (not included)



## The Toro Promise — Limited Five-Year Warranty

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrants, to the owner, each new piece of equipment (featured in the current catalog at date of installation) against defects in material and workmanship for a period described below, provided they are used for irrigation purposes under manufacturer's recommended specifications. Product failures due to acts of God (i.e., lightning, flooding, etc.) are not covered by this warranty.

Neither Toro nor Toro Warranty Company is liable for failure of products not manufactured by them even though such products may be sold or used in conjunction with Toro products.

During such warranty period, we will repair or replace, at our option, any part found to be defective. Your remedy is limited solely to the replacement or repair of defective parts.

Return the defective part to your local Toro distributor, who may be listed in your telephone directory Yellow Pages under "Irrigation Supplies" or "Sprinkler Systems," or contact The Toro Warranty Company P.O. Box 489, Riverside, California, 92502. Phone (800) 664-4740 for the location of your nearest Toro distributor or outside the U.S., call (951) 688-9221.

This warranty does not apply where equipment is used, or installation is performed in any manner contrary to Toro's specifications and instructions, nor where equipment is altered or modified.

Neither Toro nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of equipment, including but not limited to: vegetation loss, the cost of substitute equipment or services required during periods of malfunction or resulting non-use, property damage or personal injury resulting from installer's actions, whether negligent or otherwise.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

All implied warranties, including those of merchantability and fitness for use, are limited to the duration of this express warranty.

Some states do not allow limitations of how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

The Toro TMC-424E series controllers are covered by this warranty for a period of five years from the date of installation.

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## FCC Compliance Information

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a FCC Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the irrigation controller with respect to the receiver.
- Move the irrigation controller away from the receiver.
- Plug the irrigation controller into a different outlet so that the irrigation controller and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402.

## Customer Care You Can Count On

At Toro, not only do we provide the most efficient water management products; we deliver a superior customer support experience as well. Like our products, Toro's customer support teams have more than exceptional technical skills – they are empowered to resolve problems and always perform in the customer's best interest. Our support team is truly extraordinary at the services they provide. Among the four team members, they offer almost 100 years of Toro irrigation experience and hands-on product knowledge.

**Call: 800-664-4740 inside U.S.A. or 951-688-9221 outside U.S.A.,  
Monday through Friday, 7:30 a.m. to 4:00 p.m., Pacific Time.**